

EPSON STYLUS® PRO GS6000 MAINTENANCE SCHEDULE

REGULAR MAINTENANCE

This maintenance needs to be done at certain intervals or if a problem is seen with the printout. Ensure that the printer is installed on a level floor with conditions of 20-30°C and 40-60% humidity. You will require a Maintenance Kit and/or an Ink Cleaner Kit and/or a set of Cleaning Cartridges

MAINTENANCE KIT

Consists of: 2 pairs Plastic gloves, 1 x Flushing Pad, 12 x Cleaning sticks

INK CLEANER KIT

Consists of: 6 pairs Plastic gloves, Ink Cleaner, Plastic cup

CLEANING CARTRIDGES

8 x T6230 Cleaning cartridges for Head Washing

CARRIAGE RAIL WIPER

1 x Plastic Carriage Rail wiper, 1 x Carriage Rail Oil

CLEANING WIPER

WHEN?

Once a month
Or if prints are blurred or smeared

HOW?

Menus/Maintenance/Carriage Maintenance
Printhead moves to LHS. Use cleaning stick dipped in Ink cleaner as per instructions
Front of wiper (Left hand side) - Clean along wiper length
Back of wiper (Right hand side) - Wipe upwards along wiper
Discard cleaning stick

CLEANING AROUND PRINTHEAD

WHEN?

Once a month
Dust or ink causing dropouts or ink droplets

HOW?

Menus/Maintenance/Carriage Maintenance
The printhead moves over the space on the LHS of the printer. Using a torch examine the areas around the printheads. If inky or dusty, wipe the surrounds with a dry cleaning stick
DO NOT TOUCH THE PRINTHEAD SURFACE!

HEAD CLEANS

LEVELS

Using the Cleaning button on the Control Panel
Menus/Maintenance/Cleaning (Medium)
Menus/Maintenance/Cleaning (Heavy)
Menus/Maintenance/Head Washing

Head Washing requires a set of cleaning cartridges and approximately 35 mins.

NB Cleaning carts can only be used ONCE!

Check that the Drain tank has been emptied before Head Washing

Switch off printer after Head Washing completed

Leave the printer off at this stage if you want to transport it.

Finally, switch the printer back on and do an Initial Fill of the inks

AUTOMATIC CLEANING

PRINTER SETUP

Printer Setup/Nozzle Check

Off

On Every Job

On Every 10 Jobs

Choose the most appropriate setting for your workflow

Cleaning interval

1hr, 2hr, 3hr, 4hr, 5hr, 6hr, 9hr, 12hr, 18hr, 24hr. Default is 6 hours

CARRIAGE RAIL WIPING

WHEN

Every 3 months or if the carriage becomes noisy

HOW

Put 5 drops of the Carriage Rail oil onto each pad of the Wiper Tool. Rub once along the carriage rail, top and bottom in both directions

TRANSPORTING THE PRINTER

WHEN

Moving the printer to another location

HOW

Perform a Head Wash as shown under Head Cleans and switch off the printer after the Head Wash is completed and before it asks for Inks to be installed.

Keep the printer level during transportation



For Technical Support, contact your Prographics Dealer